


## UK SINGLE WATER SUPPLY FITTING

RETRO FITTING TO EXISTING TOILET PAN

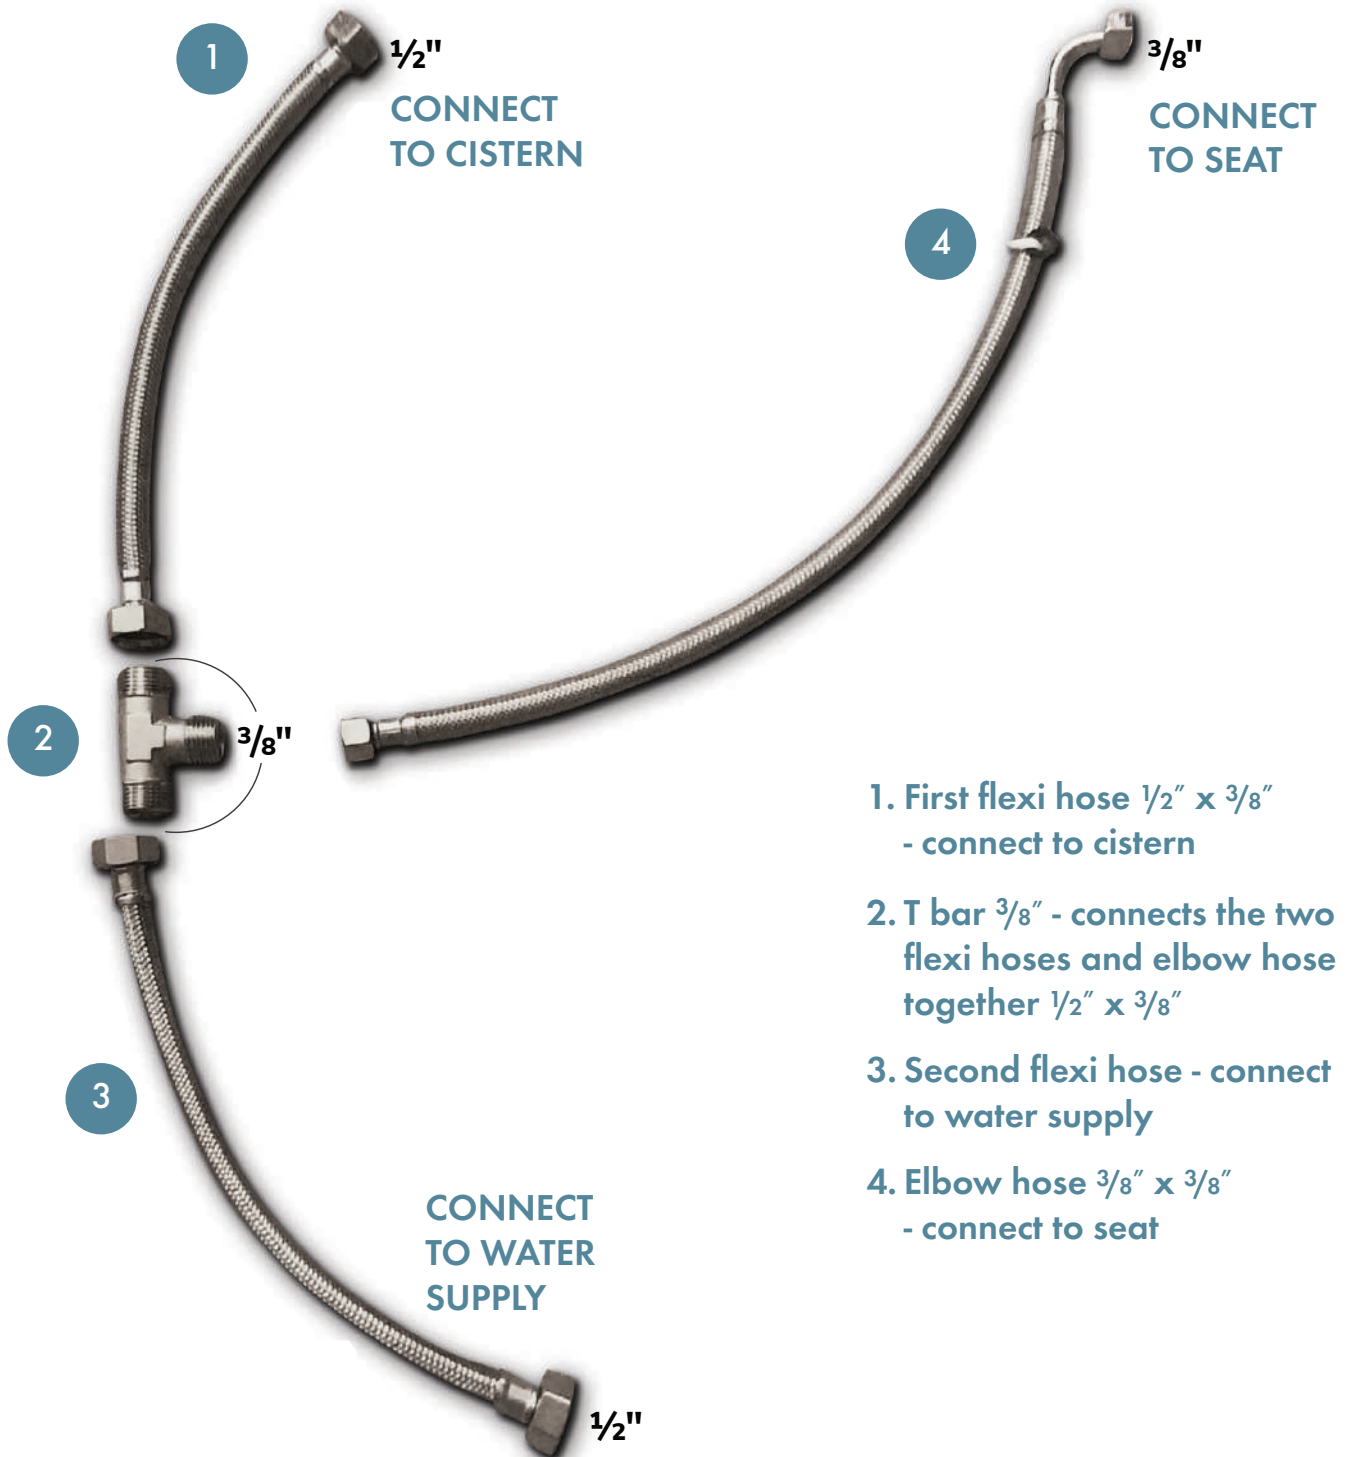

1. First flexi hose  $\frac{1}{2}$ " x  $\frac{3}{8}$ "  
- connect to cistern
2. T bar  $\frac{3}{8}$ " - connects the two flexi hoses and elbow hose together  $\frac{1}{2}$ " x  $\frac{3}{8}$ "
3. Second flexi hose - connect to water supply
4. Elbow hose  $\frac{3}{8}$ " x  $\frac{3}{8}$ "  
- connect to seat

## NEED HELP?

For more help on fitting please visit Every Drop Is Precious YouTube channel  
Call +44 (0) 7470 019 986 or visit [www.everydropisprecious.com](http://www.everydropisprecious.com)